

SureStrike™



LASER AMMO
TRAINING TECHNOLOGIES

Recoil Enabled Rifle



SAFETY



ACCURACY


Flash User Guide

Please read the Use Guide in full before using the
Laser Ammo FLASH Adapter

AirSoft Rifle Flash Suppressor Adapter

Please read the Use Guide in full before using the Laser Ammo FLASH Adapter.

 **WARNING:** All airsoft safety procedures apply when using the FLASH Adapter.

 
 **ATTENTION:** AirSoft guns warranties may be voided with the use of the LA FLASH Adapter

WARNING: AirSoft guns can cause serious injuries or death!
Always store your ammunition (pellets, BBs)
in an area that is separate from your training area.

Customer can purchase a Flash Kit (With the SureStrike™ Laser Cartridge) to use with his own Airsoft rifle, or as a part of a Recoil Enabled Rifle.

(*) This user guide applies to all Flash products from Laser Ammo.

Parts

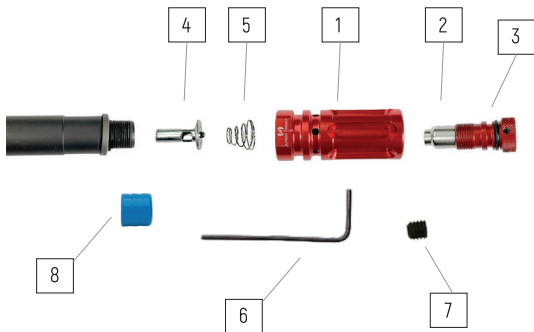

1. Flash adapter
2. Laser cartridge
3. Front retainer
4. Firing Pin
5. Spring
6. Allen key
7. Spare screw
8. Battery for Laser

SureStrike™ Laser Assembly

1. Assemble the Laser cartridge by first inserting the battery pack into the Laser module, flat side (+) facing away from the laser (up). Thread the cap on to the Laser module. Push the black premier on the cap of the assembled cartridge to insure the laser is working correctly.



2. Insert the Surestrike™ cartridge (2) into the Red front retainer (3) with the laser body entering first, leaving the cap on the outside of the retainer. Make sure the Allen screws are opened enough to allow the cartridge to seat at the bottom of the retainer. Ensure front of laser is flush with the Retainer. Gently screw in all Allen screws equally until they bottom out but do not tighten.



3. For the Flash Kit to be used on user own Airsoft, remove the flash suppressor by unscrewing it, please note the threads are commonly left hand and may also be fastened by a pin. Make sure you have the correct 14mm thread FLASH adaptor before proceeding.



Flash Assembly

4. Thread the Red front retainer assembly into the suppressor Adapter (1) until it bottoms out, then thread it back out only enough to place the first Allen screw pointing up. This will allow adjustment points for windage and elevation.



5. Hold the rifle without the flash suppressor, with the barrel pointing up. Place the firing pin on the barrel of the rifle, and place the spring on top of the firing pin; wide side out.



6. Screw the Suppressor adapter onto the muzzle of your Air Soft rifle and tighten.



Windage & Elevation

The retainer has 4 adjustment screws for aligning the laser. The screws on the sides are used for windage, and the screws on the top and bottom are used for elevation.



- Holding your Airsoft rifle, preferably on a rest for accuracy, fire at your target from the distance you would normally practice at.
- If your shot is to the left, adjust by unscrewing the screw on the right side and tighten the screw on the left. Do not overtighten.
- If your shot is higher, adjust by unscrewing the screw on the bottom and tighten the screw on the top. Do not overtighten.

Always begin by opening the opposite screw first, to allow the cartridge to move as you tighten the other side.



Always keep your firearm pointed away from you.

Changing the Battery

The battery may be changed without opening the alignment Allen screws and losing adjustments.

- Unscrew and remove the front retainer assembly (3).



- Unscrew the action cap (cap only! Leave the laser inside the retainer) and remove the old battery.
- Reassemble with new battery.



Laser Maintenance & Service

The Surestrike™ Laser Cartridge is an electronic device and should always be treated as such.

Wipe the Laser cartridge only with a soft fabric - do not immerse in solvents or cleaning agents.

Clean the laser lens using a glass cleaner and cotton swab.

Take out battery when not in use.

 
Laser Safety Rules

Due to Product size, product labeling only appears in this user information.

Warning: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


Laser Maintenance & Service

- The SureStrike™ cartridge is comprised of three (3) components: Laser, battery and cap. The cartridge is controlled by vibration.

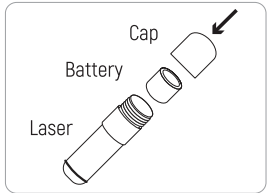

- Laser Ammo warranty the back cap for a minimum of 5,000 shots. After that, the firing cap can be expected to wear and fail to fire the laser. If you experience such wear, contact Laser Ammo to purchase a replacement cap. Follow the battery changing procedures to replace the cap.
- This Laser Product is designated as Class 1 during all procedures of operation, maintenance and service. No scheduled maintenance is necessary to keep the product in compliance.
- It is strictly forbidden to modify the Cartridge. Opening of Cartridge is limited to battery replacement only.

 Laser Maintenance & Service

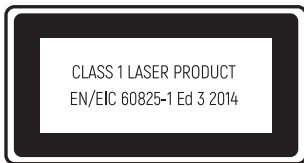

Complies with FDA performance standards for laser products except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56., dated May 8, 2019.

Laser Ammo USA Inc
PO Box 222017
Great Neck, NY 11021
Made in Israel

Model # _____
Lot # _____
Date _____

No liability is expressed or implied for damage or injury as a result of installation or use of this product. Warranty is limited to the replacement or repair of the original product only.

Full set of video instructions is available at: www.laser-ammo.com

Warranty

Laser Ammo warrants that this product shall be free from material defects and defects in workmanship for the earlier occurrence of: A period of one (1) year from the date of the purchaser's receipt of the product. Notice of any warranty claim must be received by Laser Ammo, in writing, prior to the expiration of the warranty period. Laser Ammo reserves the right to inspect the product before honoring the warranty. Laser Ammo's warranty is limited solely to the above and applies only for the period set forth. Laser Ammo will not be liable for any loss, damage, direct, incidental or consequential damages of any kind, whether based upon warranty, contract, negligence, or strict liability, or arising in connection with the sale or use of the product by the user or any third party. Laser Ammo's warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, or modification. This limited warranty does not apply to any product on which the original identification information has been altered, obliterated or removed. Laser Ammo will, at its sole option, either repair or replace any part of the product that

Warranty

proves defective by reason of improper workmanship or materials. In all events, Laser Ammo's maximum liability to the purchaser related to any warranty claim or defect with respect to the product shall not exceed the contract price for the specific product claimed to be defective or unsuitable, or alleged to have been the cause of any damage to the purchaser or any third party. Airsoft guns warranties may be voided with the use of the laser Ammo Airsoft Adapter Cartridge. Laser Ammo does not assume any liability regarding the operating condition of the airsoft gun. The foregoing is in lieu of all other warranties, oral, expressed or implied, including, but not limited to, any implied warranties of fitness for a particular purpose.

The provisions of this section shall be applicable to both implied warranties (if any) and expressed warranties.

Have a question about your product?

Email us at Support@laserammo.com
or visit our website at LaserAmmo.com

United States Sales and Operations

Laser Ammo USA Inc
PO Box 222017
Great Neck, NY 11022

Europe Sales

Skogsvallsvägen 7,
74335 Storvreta
Sweden
www.laser-ammo.se
info@laser-ammo.se



LASER AMMO
TRAINING TECHNOLOGIES

Product of Laser Ammo USA, Inc.
Phone: (516) 858-1262 (U.S.)

LaserAmmo.com