



LASER AMMO
TRAINING TECHNOLOGIES

UNIVERSAL RED DOT PLATE FOR LASER AMMO RECOIL ENABLED GLOCK GEN 5



Quick User Guide

(*) should work with most red dot models.

1. Remove magazine, clear and check chamber.
2. Release slide lock, remove slide.
3. Remove factory rear sight by unscrewing the screw on the bottom rear of slide.
4. Remove two (2) set screws from bottom of mounting plate, Insert mounting plate into slide groove. Secure plate with provided mounting plate screw through the same hole you removed the screw from, in step #3.

Hold Optics plate firmly to frame while screwing in the base set screw. (stock sight screw will NOT thread into mounting plate). IMPORTANT: Do NOT over-tighten.

5. Using set screws from step #4, return to top of plate, tighten until plate is secure and level.
6. Install your red dot sight (additional screws provided)

Made in China

Distributed by: Laser Ammo USA Inc

LaserAmmo.com

Support@laserammo.com

(516) 858-1262